

User Manual v1.0

flexiti

Sports Cam

Waterproof · Full HD

FX 008



Wide Angle
Lens



HDMI



Full HD



 
 
Waterproof
to 30m



1.5 Hours


www.flexiti.pl

THE BASICS

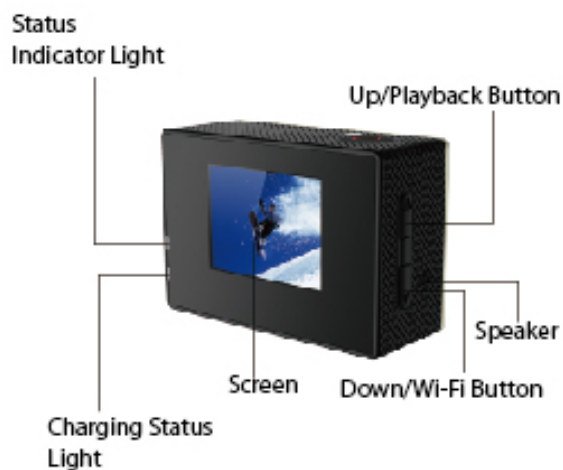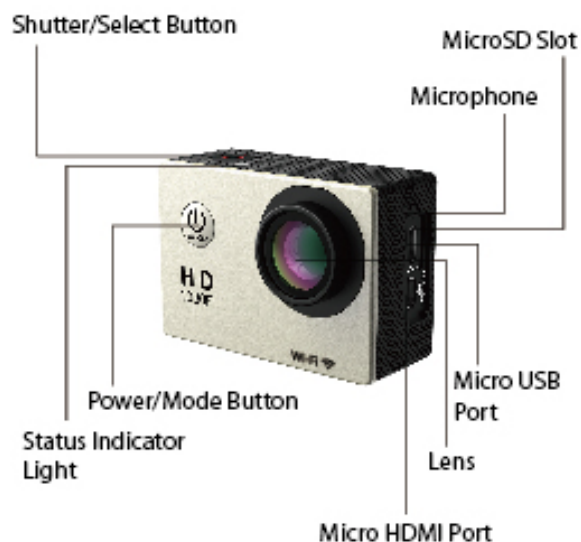



WATERPROOF HOUSING

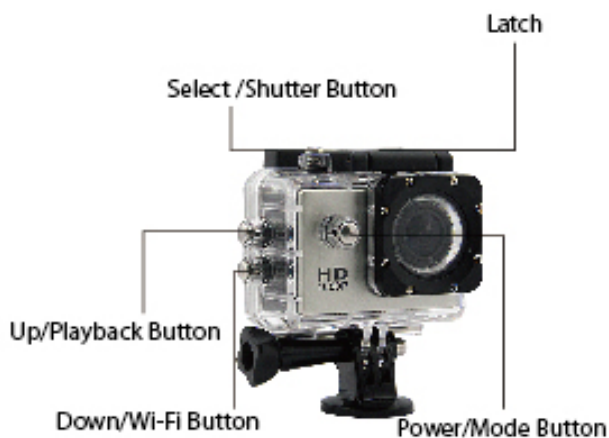 

ACCESSORIES



Waterproof
Housing



Handle Bar/
Pole Mount



Mount 1



Mount 2



Mount 3



Mount 4



Mount 5



Mount 6



Mount 7



Clip 1



Clip 2



Helmet
Mounts



Bandages



 
Battery



Adhesives



Tethers

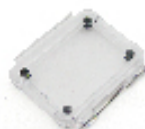

Protective
Backdoor



USB Cable



 
 
Charger

 
 
 


Lens Cloth

MOUNTING YOUR CAMERA

Attach your camera to helmets, gear and equipment.

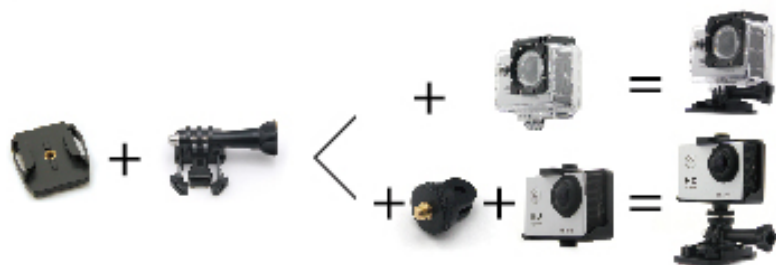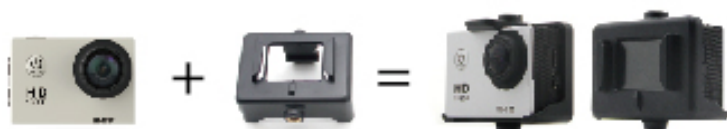

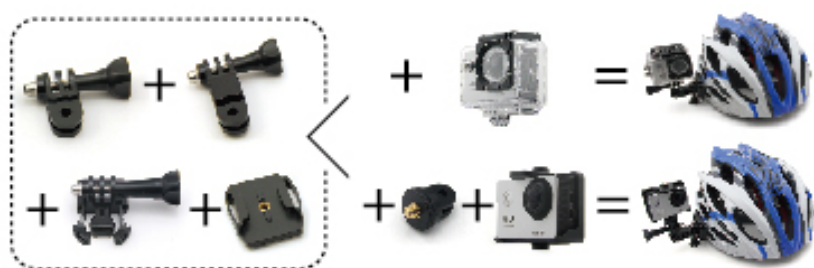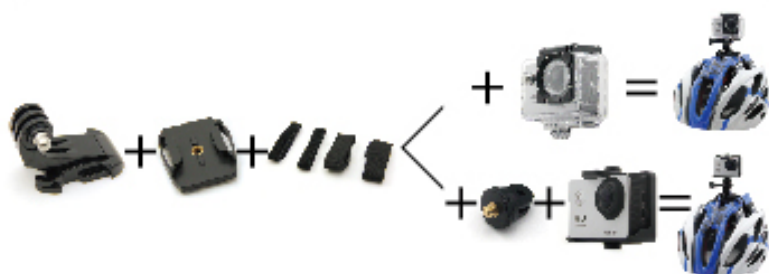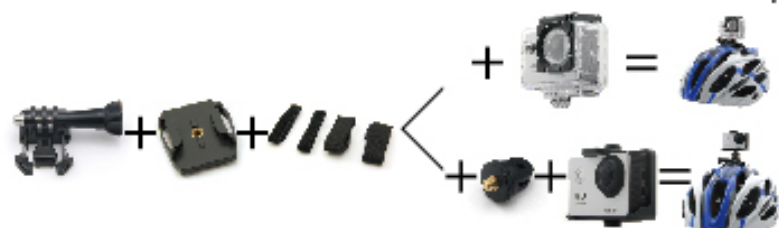

GETTING STARTED

HELLO

Congratulations on your new camera! This user manual will help you learn the basics of capturing life's most incredible moments!

To power ON:

Press the **Power/Mode Button**.






To power OFF:

Press and hold the **Power/Mode Button**.

OVERVIEW

Turn camera ON and repeatedly press the **Power/Mode Button** to cycle through camera modes and settings. The modes will appear in following order:



 Video	Record Video
 Photo	Capture a single photo.
 Burst Photo	Capture photo bursts
 Time Lapse	Shoot a series of photos at set time intervals
 Settings	Adjust camera settings, resolution and more.

SETTINGS



Press the **Shutter/Select Button** to enter the settings menu. Repeatedly press the **Power/Mode Button** to cycle through options and press the **Shutter/Select Button** to select desired option. Or use the **Up/Playback** or **Down/Wi-Fi Button** to cycle through the various options.

Video Resolution: 1080p 30fps/720p 60fps

MicroSD Card	1080p 30fps	720p 60fps
32 GB	240 mins	320 mins
16 GB	120 mins	160 mins
8 GB	60 mins	80 mins
4 GB	30 mins	40 mins

Looping Video: Off/On

Time Stamp: Off/Date/Date & Time

Exposure: +-2.0/+-1.7/+-1.3/+-1.0/+-0.7/+-0.3/0

Photo Resolution: 12M/8M/5M/2M

Burst Photo: 3 Photos

Time Lapse: Off/2s/3s/5s/10s/20s/30s/60s

Continuous Lapse: Off/On

Power Frequency: 50Hz/60Hz/Auto

Language: English/Simplified Chinese/Traditional Chinese/ France/Spanish/Italian/ Portuguese/Dutch/ Polish/ Russian/ Japanese

Date & Time: MM/DD/YY, YY/MM/DD,
or DD/MM/YY

Sound Indicator: Shutter On/Off, Start Up 1/2/3/
None Beep On/Off, Volume
0/1/2/3

Upside Down: On/Off

Screen Saver: Off/1 min/3 mins/5 mins

Power Saver: Off/1 min/3 mins/5 mins

Format: No/Yes

Reset: No/Yes

Version

VIDEO MODE

Video

To record Video, verify the camera is in **Video** mode. If the **Video** icon on your camera's LCD screen is not showing, press the **Power/Mode Button repeatedly** until it appears.

To start recording:

Press the **Shutter/Select Button**. The camera will emit one beep and the **Camera Status Lights** will flash while recording.

To stop recording:

Press the **Shutter/Select Button**. The **Camera Status Lights** stop flashing and the camera emits one beep to indicate recording has stopped. This camera automatically stops recording when

the battery is out of power. Your **Video** will be saved before the camera powers **OFF**.

PHOTO MODE

Photo

To capture a **Photo**, verify the camera is in **Photo** mode. If the **Photo** icon on your camera's LCD screen is not showing, press the **Power/Mode Button** repeatedly until it appears.

To take a photo:

Press the **Shutter/Select Button**. The camera will emit the camera shutter sound.

BURST PHOTO MODE

Burst Photo

To capture a **Burst Photo** series, verify the camera is in **Burst Photo** mode. If the **Burst Photo** icon on your camera's LCD screen is not showing, press the **Power/Mode Button** repeatedly until it appears. In **Burst Photo** mode, your camera takes 3 photos in 1.5 seconds.

To take a Burst Photo series:

Press the **Shutter/Select Button**. The camera will emit camera shutter sounds.

TIME LAPSE MODE

 **Time Lapse**

To capture a **Time Lapse** series, verify the camera is in **Time Lapse** mode. If the **Time Lapse** icon on your camera's LCD screen is not showing, press the **Power/Mode Button** repeatedly until it appears. In **Time Lapse** mode, your camera captures a series of photos at **2,3,5,10,20,30** or **60** second intervals.

To take Time Lapse:

Press the **Shutter/Select Button**. The camera initiates countdown and emits the camera shutter sound each time a **Photo** is taken.

QUICK MODES



To enter the Quick Modes menu

1. Verify the camera is in **Camera modes**.
2. Press and hold the **Shutter/Select Button**

for three seconds.

3. Repeatedly press the **Power/Mode Button** to cycle through **camera modes**.
4. Press the **Shutter/Select Button**.
5. **To exit**, hold down the **Shutter/Select Button** for three seconds.

PLAYBACK

Playing Back Videos and Photos

To enter the Playback menu:

1. Verify the camera is in **Camera modes**.
2. Press the **Up/Playback Button** to enter the **Playback** menu.
3. Repeatedly press the **Power/Mode Button** to cycle through **Video** and **Photo**.
4. Press the **Shutter/Select Button** to select desired option.
5. Use **Up/Playback Button** or **Down/Wi-Fi Button** to cycle through the various options.
6. Press the **Shutter/Select Button**.
7. To return to the **Playback menu**, press the **Power/Mode Button**.
8. **To exit**, hold down the **Up/Playback Button** for two seconds.

STORAGE/MICROSD CARDS

This camera is compatible with **4GB**, **16GB**, and **32GB** capacity **microSD**, **microSDHC**, and **microSDXC** memory cards. You must use a **microSD** card with a **Class 10 speed** rating. We recommend using brand name memory cards for maximum reliability in high-vibration activities.

BATTERY

Charging The Battery

To charge the battery:

1. Connect the camera to a computer or USB power supply.
2. The **Charging Status Light** remains **ON** while the battery is charging.
3. The **Charging Status Light** will turn **OFF** when the battery is fully charged.

* Charging Time: 3.5 hours

CAMERA APP

Connecting to the iSmart DV App (Wi-Fi Edition Only)

The **iSmart DV App** lets you control your camera remotely using a smartphone or tablet. Features include full camera control, live preview, photo playback and sharing of select content and more.

1. Download the **iSmart DV App** to your smartphone or tablet at the **Apple App Store** or **Google Play**.
2. Press the **Power/Mode Button** to power camera **ON**.
3. Make sure the camera is in **Camera modes**.
4. Press the **Down/Wi-Fi Button** to turn on **Wi-Fi***.
5. In your smartphone or tablet's Wi-Fi settings, connect to the network called "**Sports Cam 8**" followed by a series of numbers.
6. Enter the password "**1234567890**".
7. Open the **iSmart DV App** on your smartphone or tablet.

* Press and hold the **Down/Wi-Fi Button** for three seconds to turn **OFF Wi-Fi**.

The **iSmart DV App** is compatible with smartphones and tablets listed below.

For Apple iOS:

* iPhone 5, 5S, 6 & 6 Plus (iOS 8)

* iPad Air & Mini (iOS 8)

For Android:

* Android 4X Quad-core devices



iOS App Download
For Wi-Fi Edition



Android App Download
For Wi-Fi Edition

COMPATIBILITY

* Compatibility varies by device. Content playback, sharing and access to the camera's memory card might be not available on some devices.